

# Leitfaden FMS Portal

## Anlegen / Registrieren eines neuen FMS Portable Sticks

### 1. „Register License Manager or USB Device“ – zum Anlegen des FMS Sticks

The screenshot shows the 'Download Central Home' page. On the left, a sidebar menu includes 'License Portal' (selected), 'Product List', 'Product Search', 'Order History', 'Search Line Items', 'Recent Product Releases', 'Recent Files Posted', 'Recent Email Notifications', 'Register Additional License Tokens', 'License Activation' (selected), 'Search Devices', 'Search License Manager or USB Device', 'Register License Manager or USB Device' (selected), 'Upload Capability Request', 'Administration' (with sub-options like Account Administrators, Allocation Accounts, Account Members, Change Password, Email Preferences, Product Preferences, Your Profile), 'Get Help' (with sub-options like Download Help, Table of Contents, FAQs, Support), and copyright information for 2022.

The main content area displays 'Recent Email Notifications' with five entries from April 6, 2022, all reading 'Thank you for your purchase License/AM exchange'. Below that is 'Recent Files Posted' with two entries: 'Apr 14, 2022 ToolsTalk 2 Station Setup release 2.18.1' and 'Mar 29, 2022 ToolsTalk Service 2 User Edition release 1.15'. At the bottom, there's a 'Browse My Software and Documentation' section with tabs for 'My Products' (selected) and 'Product Lines', showing the 'Atlas Copco' product line.

### 2. Seriennummer (ID), „ID Type“ und „Type“ korrekt eintragen.

- Die Parameter „ID Type“ und „Type“ sind der o.g. Beschreibung zu entnehmen und für jeden FMS Stick gleich!
- „Device Name“ und „Site Name“ sind frei wählbar
- Registrierung mit „Create“ abschliessen

The screenshot shows the 'Register License Manager or USB Device' form. The 'Type' dropdown is set to 'FLX\_SERVER'. A red box highlights the 'FMS Portable' row in the table below, which specifies 'ID: 6 to 8-digit serial no', 'ID\_Type: PUBLISHER\_DEFINED', and 'Type: USB\_DEVICE'. Other rows in the table include 'Physical server' (ID: MAC e.g. 001C23595A92, ID\_Type: ETHERNET, Type: FLX\_SERVER) and 'Virtual machine' (ID: MAC address or UUID, ID\_Type: ETHERNET or VM\_UUID, Type: VM\_SERVER). The form also includes fields for 'ID\*' (empty), 'ID Type' (set to 'ETHERNET'), 'Device Name' (empty), 'Site Name' (empty), and 'Type' (set to 'FLX\_SERVER'). A 'Create' button is at the bottom.

## Hinzufügen von Lizenzen zum FMS Portable Stick

1. „Search License Manager or USB Device“ – zum Auswählen des FMS Sticks

The screenshot shows the 'Download Central Home' page of the Atlas Copco website. The left sidebar contains a navigation menu with several sections:

- License Portal**:
  - Home
  - Product List
  - Product Search
  - Order History
  - Search Line Items
  - Recent Product Releases
  - Recent Files Posted
  - Recent Email Notifications
  - Register Additional License Tokens
- License Activation**:
  - Search Devices
  - Search License Manager or USB Device
- Administration**:
  - Account Administrators
  - Account Members
  - Change Password
  - Email Preferences
  - Product Preferences
  - Your Profile
- Get Help**:
  - Download Help
  - Table of Contents
  - FAQs
  - Support

The main content area has a heading 'Download Central Home'. Below it, there's a welcome message and sections for 'Recent Email Notifications' (with a note about no recent emails) and 'Recent Files Posted' (with a note about no recent files). At the bottom, there's a 'Browse My Software and Documentation' section with tabs for 'My Products' and 'Product Lines', and the 'Atlas Copco' logo.

2. S/N des FMS Sticks auswählen auf den Lizenzen / Funktionen übertragen werden sollen

ID	Type	Device Name	Site Name
2680441	PUBLISHER_DEFINED	GP20000100 Krone	Werlte
730047	PUBLISHER_DEFINED	Helmut Jansen	Krone

Übersicht aller bisher verwendeten Lizenzen für den ausgewählten Stick

- License Generated → Der Lizenzfile mit diesen Lizenzen wurde generiert

3. zum Hinzufügen von neuen Lizenzen zum FMS Stick „Map Features“ anklicken

Feature Name	Status	License Order Number	Nr Features Mapped	Expiration	Downloadable Items
Critical Control	License generated	TDE11002263110009202151 (00001001)	6	Permanent	None
Virtual Station	License generated	TDE1100226311000943379 (00001002)	3	Permanent	None
Process Control	License generated	TDE110022631100091962 (00001003)	2	Permanent	None
Virtual Station	License generated	TDE11002263110009198559 (00001004)	3	Permanent	None
Gradient	License generated	TDE11002263110009774454 (00001005)	3	Permanent	None
Critical Control	License generated	TDE11002263110009199715 (00001006)	2	Permanent	None
Virtual Station	License generated	TDE11002263110009324179 (00001007)	5	Permanent	None

4. Bei der gewünschten Lizenz die Anzahl eingeben und die Eingabe mit „Map Features“ bestätigen
- ➔ Achtung: Wenn eine Lizenz durch „Map Features“ auf einen Stick übertragen wurde, kann diese durch einen Techniker nicht mehr zurückgenommen werden. Lizenz ist dann an den FMS Stick gebunden.
- ➔ Rücknahme solcher Lizenzen nur durch Tickets möglich die nach Schweden eskaliert werden (ASP: D. Eberhardt / S. Menne)

Feature Name	Activation Code	License Order Number	Expiration	Available Units in Line Item	Total Units in Line Item	Qty to Add
Critical Control	3073-6E32-00ED-94DE	TDE010022831000991979 (50000077)	Permanent	6	6	1
ToolTalk 2 Line Configurator 1 CC	B465-6D76-4504-7AAF	TDE0100228310009919715 (50000077)	Permanent	2	2	

5. Mit „Download Capability Response“, wird eine Datei auf den PC runtergeladen.  
Der Dateiname ist immer die Seriennummer des FMS Sticks + die Endung .bin  
Also hier in dem Beispiel: 730067.bin  
Diese Datei auf den FMS-Stick, der im Arbeitsplatz als „USB-DISK“ angezeigt wird, ins Hauptverzeichnis kopieren.  
Wichtig!!! Die Datei oder den Inhalt des Sticks auf keinen Fall verändern!

Feature Name	Status	License Order Number	Nr Features Mapped	Expiration	Downloadable Items
Critical Control	License generated	TDE010022831000991979 (50000077)	6	Permanent	None
Vhual Station	License generated	TDE01002283100098343379 (50000077)	3	Permanent	None
Process Control	License generated	TDE0100228310009919862 (50000077)	2	Permanent	None
Vhual Station	License generated	TDE01002283100098198550 (42000077)	3	Permanent	None
Gradient	License generated	TDE0100228310009774454 (50000077)	3	Permanent	None
Critical Control	License generated	TDE01002283100099199715 (50000077)	2	Permanent	None
Vhual Station	License generated	TDE01002283100098343179 (50000077)	5	Permanent	None

