



ME 16 & ME 22 CUSTOMER ASSEMBLY INSTRUCTIONS


ALIGN THE FLANGE TO SHAFT
THEN FASTEN THE FLANGE
WITH THE TWO SCREWS.

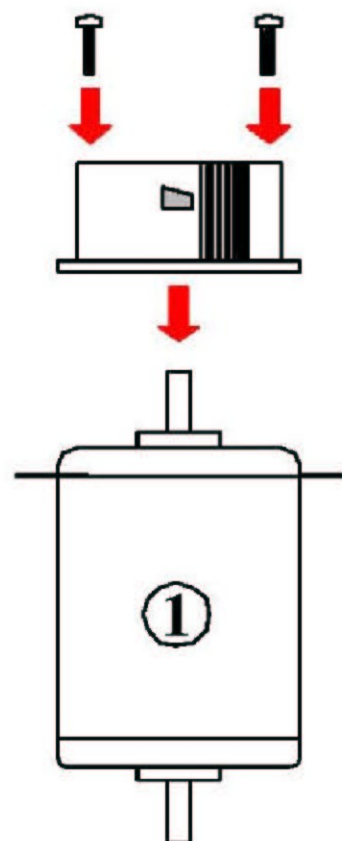


ALIGN AND FIT THE HOUSING
TO THE FLANGE.

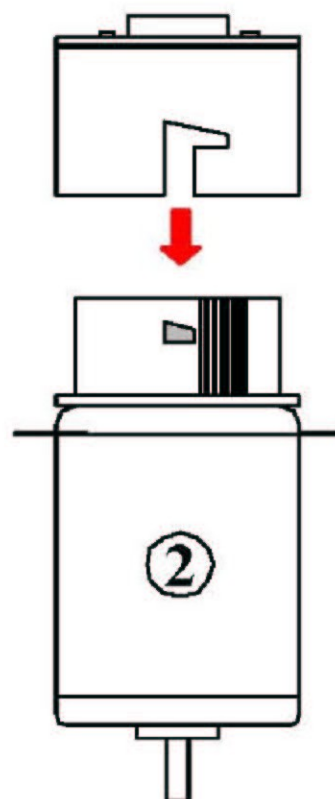

DO NOT START ROTATING
FROM THIS POSITION.

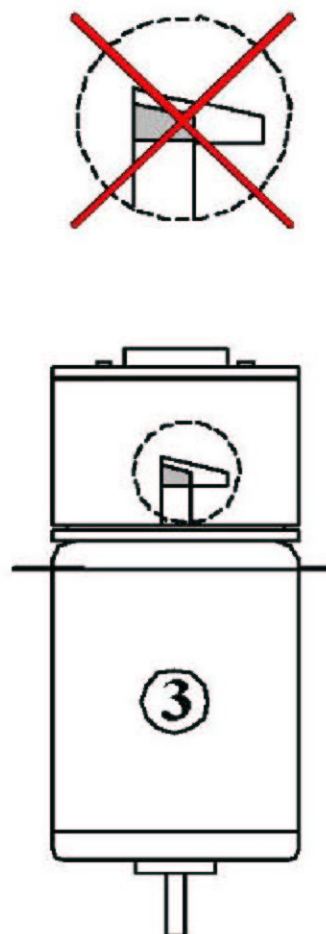


PRESS THE HOUSING TILL
THIS LIMIT STOP.
NOW YOU CAN START
ROTATING.

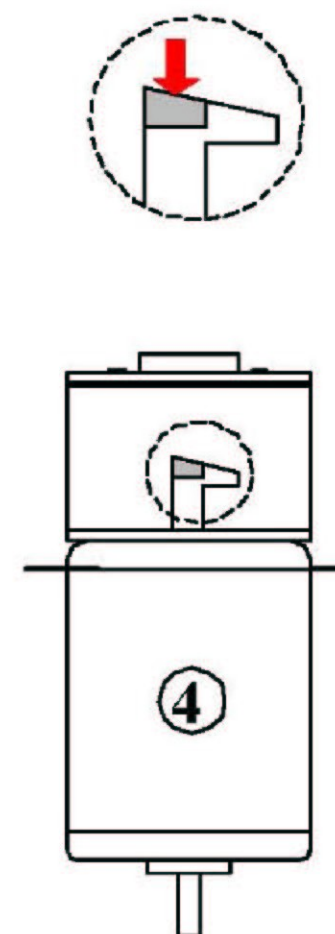


ROTATE THE HOUSING TILL
THIS LIMIT STOP.




CHANNEL A LEAD CHANNEL B
WHEN THE SHAFT TURN
CLOCKWISE AS VIEWED FROM
THE ENCODER CONNECTOR SIDE

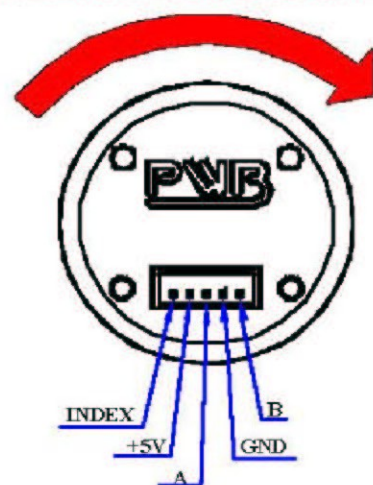

ME 22 FLANGE

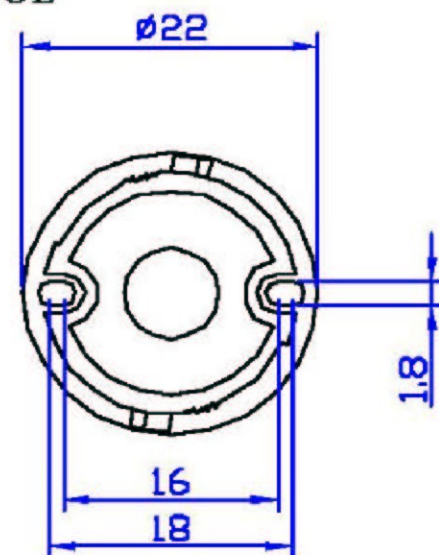

ME 16 FLANGE

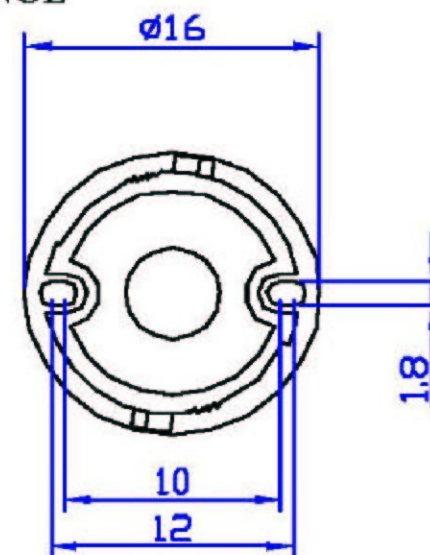

KAG: 407897 S.3/3

KV: 4291 23.06.05

confidential

PWB

DRAWING CODE: I062-D003-00-10